


Tilt switch Experiment

Introduction of Tilt switch

The ball switch, also known as the beaded switch, the steel ball switch, is actually a vibration switch. It has a different name, but it works the same way. The ball ball controls the connection or disconnection of the circuit by contacting or not contacting the pin. Simply put, like turning a light on or off, the light will go on if the switch touches the inner metal plate, and off when the switch leaves. Contact with a metal terminal or changing the path of light with beads in a switch will produce a conductive effect.

Ball switches are widely used, such as: tire pressure monitoring system (TPMS), pedal lamp, digital photo frame rotation, flip camera, anti-theft system, etc. The common spherical switches on the market are sw-200d, sw-300da, sw-520d and so on. The switch used in this experiment is sw-520d, which is OFF in the static state. When it is subjected to an external touch force to achieve the appropriate vibration, or moving at the appropriate speed to generate the appropriate centrifugal force, the needle will instantly be in the ON state, changing the electrical characteristics. When the external force disappears, the electrical characteristics return to the closed state.

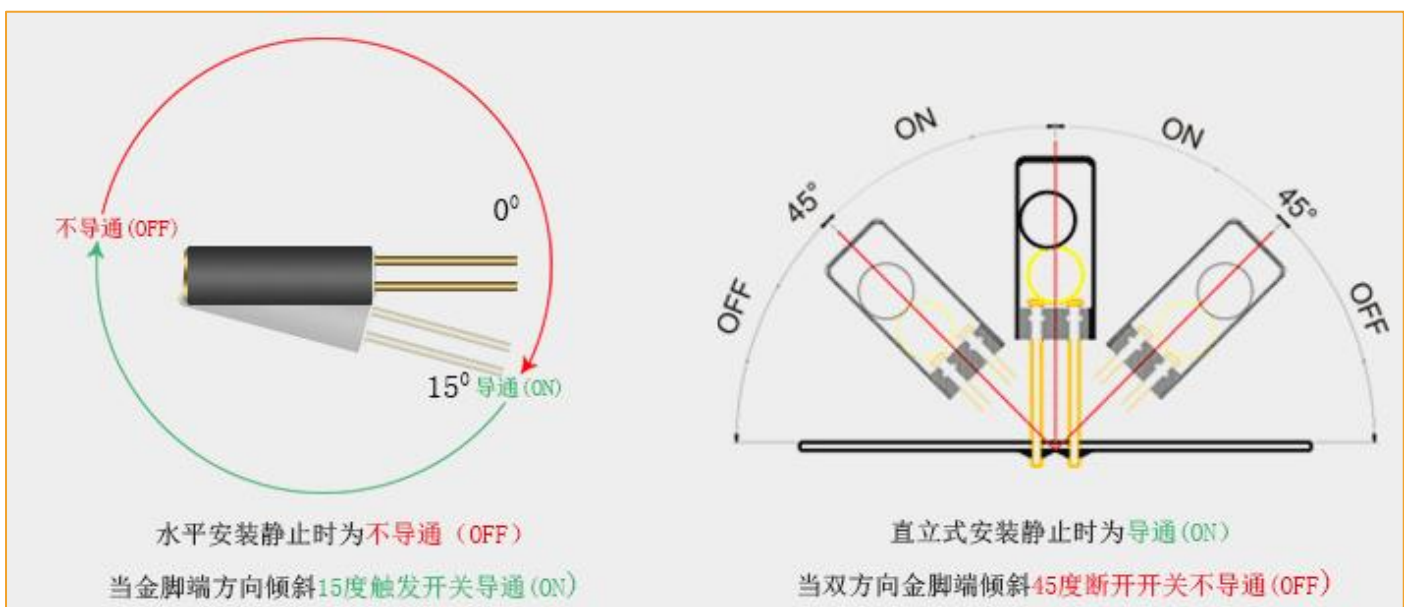

Ball switch parameters

1. Non-directional, it can be triggered from any Angle
2. Fully sealed package, waterproof and dustproof.
3. Suitable for small current circuit trigger.

4. Double pin, more stable contact.
5. Sensitive, sealed, 12V 0.1ma, turn-on time 0.1ms, open circuit impedance 10M, temperature tolerance 105.
6. Diameter 4.5mm, length 11mm.



Experiment purpose

Learn how the sw-520d vibration sensor works, and how to use Arduino to control the sw-520d vibration sensor to realize anti-theft alarm function.

The component list

- ◆ Keywish Arduino Mega 2560
- ◆ Breadboard *1
- ◆ USB cable *1
- ◆ Sw-520d vibration sensor * 1
- ◆ LED*1
- ◆ active buzzer *1
- ◆ 10kΩ resistor*1
- ◆ Jumper wires

The experimental principle

Using the working characteristics of the ball switch, when the circuit board is in the static state, the ball switch is in the on-off state. When an external force touches the circuit board and causes the vibration, the ball switch disconnects, then an alarm is triggered, the LED lights up and the buzzer rings. When the ball switch returns to the on-off state, the LED goes off and the buzzer stops ringing.


Wiring

Arduino Mega 2560	Active buzzer
13	+
GND	-

Arduino Mega 2560	SW520D
12	1
GND	2

Arduino Mega 2560	10kΩ resistor
5V	1
11	2


Arduino Mega 2560	LED
12	+
GND	—

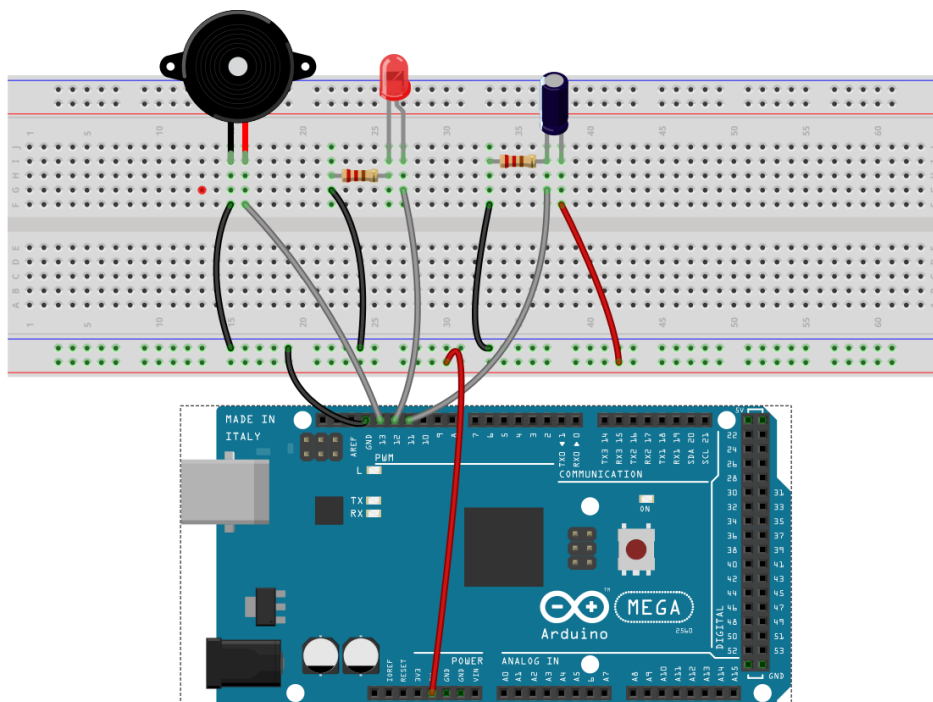

Code


```
int Led=12;// Define the LED interface
int Buzzer_pin=13;
int buttonpin=11; // Define tilt switch sensor interface
int val=0;// Define the numeric variable val
void setup()
{
  pinMode(Led,OUTPUT);// Define LED as output interface
  pinMode(Buzzer_pin, OUTPUT);
  pinMode(buttonpin, INPUT);// Define tilt switch sensor as input interface
  Serial.begin(9600);
}
void loop()
{
  val=digitalRead(buttonpin);// The value of the digital interface is read and assigned to val
  Serial.println(val);
  if (val==0)// When the tilt switch sensor detects a signal, the LED flashes
  {
    digitalWrite(Led, HIGH);
    digitalWrite(Buzzer_pin, HIGH);
    delay(1000);
  }
  else
  {
    digitalWrite(Led,LOW);
    digitalWrite(Buzzer_pin,LOW);
    delay(1000);
  }
}
```


Experiment Result

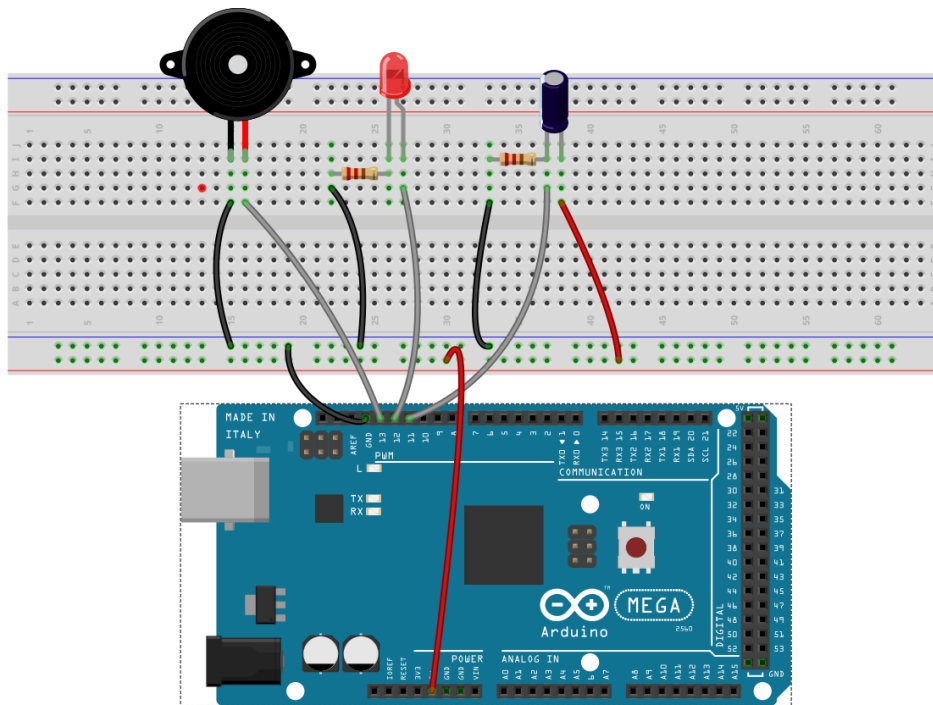


Mblock programming program

MBlock writes the program as shown in the figure below:

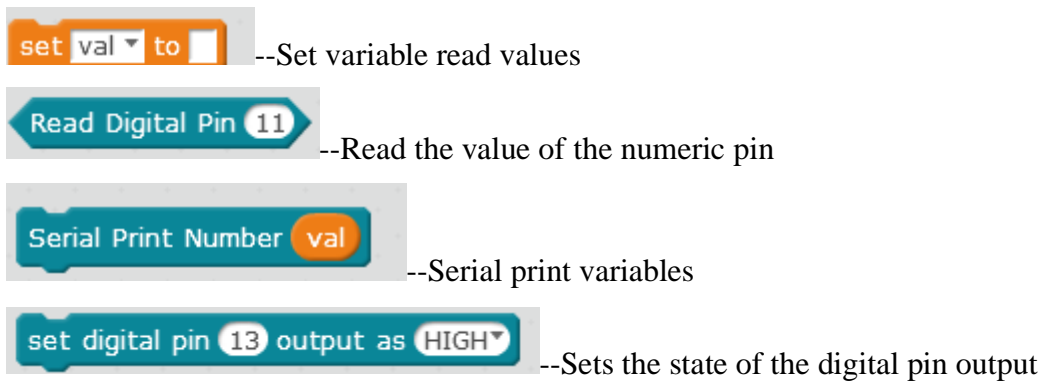

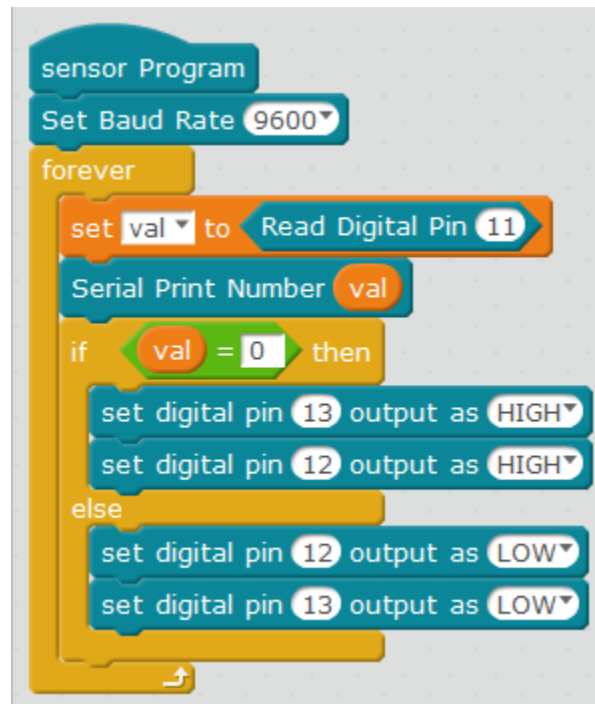

Mixly programming program

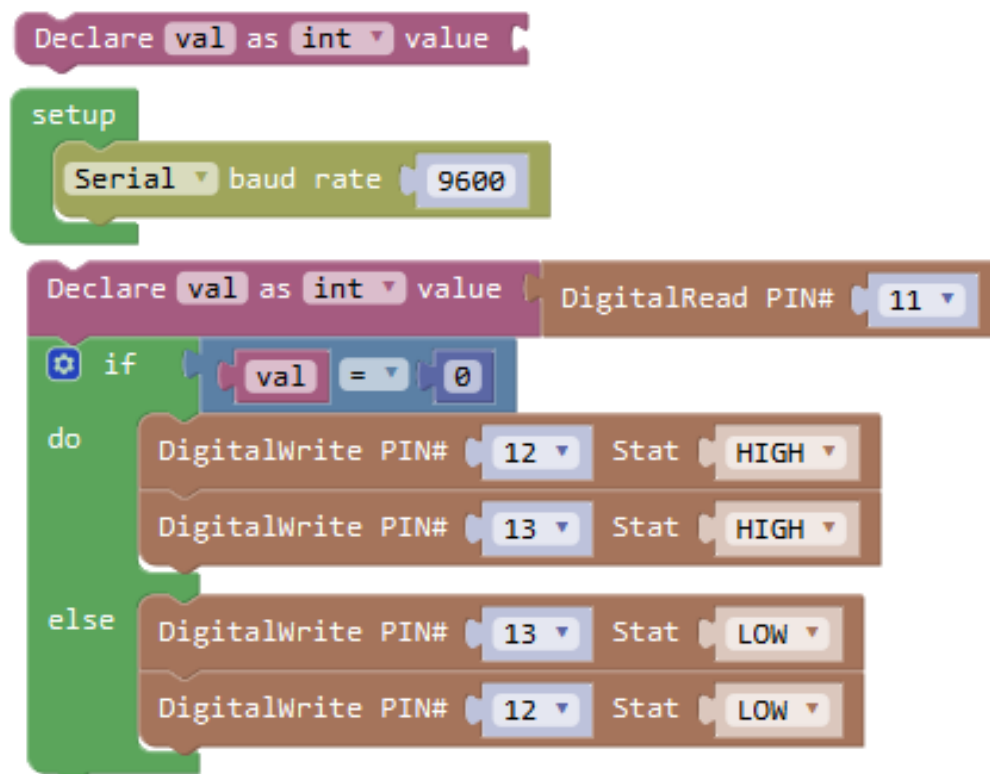

MagicBlock programming program

